

RH Spare Parts

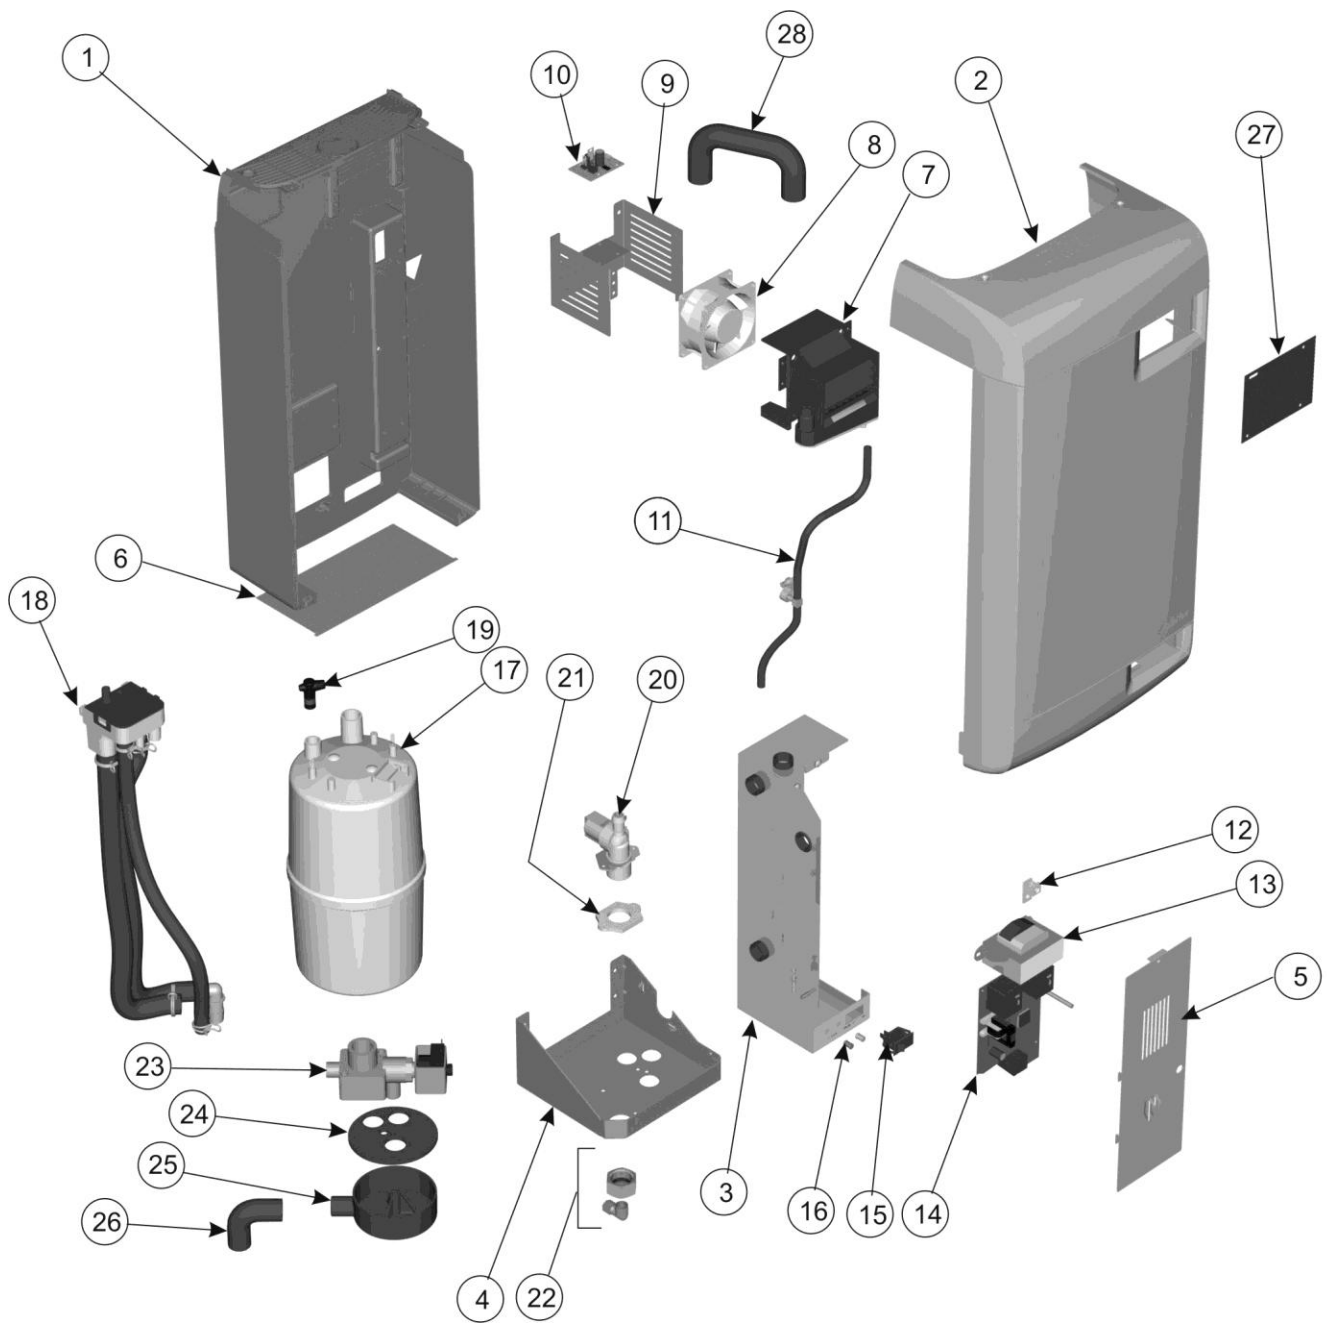


Figure 37: RH Spare parts

Table 9: RH Spare Parts List

Item	Nortec Part No.	Description
1	Reference	Housing, Plastic Back, RH
2	2547403	Housing, Plastic front cover, RH
3	Reference	Cabinet, Electrical Backplate, RH
4	2548001	Cabinet, Drain Pan, RH
5	2548000	Coverplate, Electrical, RH
6	2548313	Cover, bottom, RH
7	2548683	Distributor, Plastic, RH Blower
8	2548314	Fan, 80X80mm Tangential, 24Vdc
9	Reference	Bracket, fan, RH
10	2548008	PWB, Power Supply, RH Blower Pack
11	Contact Factory	Condensate Hose Kit, RH Blower Pack
12	1323020	GROUND CLAMP
13	2547999	Transformer Multi tap 120/208/240 to 24V
14	2549518	PCB RH Duct 10 lbs/hr
	2549519	PCB RH Space 8 lbs/hr
15	1323097	Switch Rocker SPDT 5A-250V
16	1583008	LENS CLEAR 1/4in - LED DISPLAY
17	1519002	Cylinder 202
18	2547963	Fill cup assembly, RH
19	2547964	Cylinder Plug kit, RH
20	1313244	VALVE, FILL ASSLY 005-020 LBS
21	1455000	GASKET FOR FILL THRU CAB
22	1639011	COMP FTTG 1/4in ELBOW ASSLY
23	1456000	VALVE DRAIN 93BEIGE+24V COIL
24	2547997	Gasket, Drain canal, round, RH
25	1102503	Drain Canal Round
26	2547998	Hose, 7/8" drain preformed 90deg, RH
27	2548118	Grill, built in blower, RH
28	2549654	Hose, preformed steam outlet, RH-space